INSTALLATION INSTRUCTIONS

Please Note Before Installation

Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures. Hardware Resource Company (HRC) cannot control the use or installation of add-on,spare,or replacement parts

SEE NOTE

1

000

0

0

0

0

Q

0

0 0 0 0

SEE NOTE 7

0

0

10

0

0

0 0

SEE

NO TE

σ

O

LEFT PHASE

CENTER PHASE

RIGHT PHASE

FRONT VIEW SHOWING MOUNTING LOCATIONS OF CONNECTIONS TO BUS BARS AND BREAKER

MOUNTING

BRACKET

(BREAKER REMOVED

SHOW CONNECTORS>

SEE NOTE 11

SEE NOTE 8

Z" RAILS

0

0

0

1.38

0 0 0 0

ٰصٰ

SEE NOTE

SEE NOTE 6 ·(4)

SEE NOTE 4

Instructions for installing replacement connecting hardware kits


- <u>.</u> be performed by qualified personnel only Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt to install product into a switchboard or panelboard while energized. Installation of this product should
- ? After electricity has been locked off and tagged out, confirm that no electrical current is present by using a calibrated voltage detection instrument
- ္ဟ Remove dead front cover plates as necessary to gain access to work area
- 4 De-energized bus bar should now be exposed. Tighten screws or bolts to finger tight at this point. Install the B phase (center phase) connector first
- 5.) Install out side phase connector(s), and tighten with fingers
- <u>6</u> Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- .7 Install circuit breaker or switch mounting brackets if provided
- .00 components parts. (Circuit breaker or switch is not included in this kit.) If available,place the circuit breaker or switch into its intended location to verify proper alignment and If not available, refer to the attached assembly drawings for proper dimensions and locations of

SEE

NOTE

- 9.) visible obstructions or foreign materials present that might isted connections with a calibrated torque wrench to the values After proper alignment has been verified, tighten all bus before continuing. conductors. Remove any obstructions or foreign materials reduce proper electrical clearances, in table to the right. Check to be sure there are no or damage insulated
- 10.) If not available, go to step 11 If available, install circuit breaker or switch onto connectors
- 11.) (Some may not be required with twin-mounted breakers) Install circuit breaker or switch filler plates when provided
- 12.) shall re-energize any switchboard or panel board and procedural practices necessary to ensure it is safe to switchboard or panelboard without first following all safety Re-install dead front cover plates. re-apply power to the equipment. Only qualified personne Do not re-energize the

Torqı Alun	Torque Values for Copper or Aluminum Bar Connections	r Copper or onnections
Bolt Size Inch, (mm)	ize mm)	Torque lb, - in.
#10		30
1/4	(6.4)	65
5/16	(7.9)	128
3/8	(9.5)	240
1/2	(12.7)	600

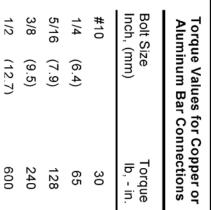

NOTICE

AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY PRODUCT BY THE MANUFACTURER.



TITLE

CUTLER-HAMMER/WESTINGHOUSE 225AMP MOUNTING HARDWARE FOR EHD, FDB, FD, HFD BREAKERS IN CDP TYPE PANEL TWIN MOUNT

즙 DRAWING 21-A142F D1 No. LAYER F D1 B ₩

> REV-B AA 04/14/05 REV'D SCREW LENGTH ITEM 15 REV-A AA 08/18/04 REV'D DWG NO ITEMS 1, 2, 3, 6 & 7 REV'D DE ₽ SCRIPTIONS ITEMS 10 THRU 18.

3.50

3.50

FISH PAPER INSULATION	BREAKER OR SWITCH	DEAD FRONT/FILLER MOUNTING	DEAD FRONT/FILLER PLATE	BRANCH BUS SUPPORT BØ	BRANCH BUS SUPPORT A/Cø	BREAKER MOUNTING BRACKET	B PHASE CONNECTOR	A/C PHASE CONNECTORS	DESCRIPTION	מסי בסי ארי ש שיים ויים ביורים בי רי טי ט פי י ארי ש שריסטאבי יבטאס ביורים בס יייואס בסי
21I-FP02-02		21F-A142FD1-00-07	21F-A142FD1-00-06	21S-AT02-03	21S-AT01-03	21M-A142F D1-01-03	21J-A142FD1-01-02	21J-A142FD1-01-01	DWG No.	ר, ט, ט פ י ייר ייד די
_)	Ω				(<u>;</u>				П	٤
<u> </u>	y	(O)	5)	(1)	$\frac{\omega}{2}$	(3	Ŭ	(ō)	ITEM QTY.	
1	6	4	6	4	8	4	ω	3	TY.	ľ
MARON UVAH UNITUR 17 X 18	%2 X ¼″ PAN HEAD SCREW	%2 X 1½" ROUND HEAD SCREW	1%2" X ½" SELF TAP SCREW	¼-20 STAR NUT	¼-20 FLAT WASHERS	¼-20 X ¾″ HEX HEAD BOLT	14-20 X 1" SELF TAP BOLT	¼-20 X 1½" SELF TAP BOLT	DESCRIPTION	110 10 11110 10:

21H-A142F D1-00