## INSTALLATION INSTRUCTIONS

Please Note Before Installation
Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts.
Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse.
Parties undertaking use of these parts assume full responsibility for following proper installation procedures.

## Instructions for installing replacement connecting hardware kits

- : to install product into a switchboard or panelboard while energized. Installation of this product should Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt be performed by qualified personnel only
- 2) a calibrated voltage detection instrument After electricity has been locked off and lagged out, confirm that no electrical current is present by using
- 3 Remove dead front cover plates as necessary to gain access to work area
- <u>4</u> ( De-energized bus bar should now be exposed. Install the B phase (center phase) connector first Tighten screws or bolts to finger tight at this point.
- 5. Install out side phase connector(s), and tighten with fingers.
- <u>6</u> Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- .7 Install circuit breaker or switch mounting brackets if provided
- .00 fit. If not available, refer to the attached assembly drawings for proper dimensions and locations of components parts. (Circuit breaker or switch is not included in this kit.) If available, place the circuit breaker or switch into its intended location to verify proper alignment and
- 9.) before continuing. connections with a calibrated torque wrench to the values listed in table to the right. Check to be sure there are no reduce proper electrical clearances, or damage insulated conductors. Remove any obstructions or foreign materials visible obstructions or foreign materials present that might After proper alignment has been verified, tighten all bus
- <u>.</u>0 If available, install circuit breaker or switch onto connectors. If not available, go to step 11.
- 11. Install circuit breaker or switch filler plates when provided (Some may not be required with twin-mounted breakers)

12.)

switchboard or panelboard without first following all safety and procedural practices necessary to ensure it is safe to re-apply power to the equipment. Only qualified personnel shall re-energize any switchboard or panel board. Re-install dead front cover plates. Do not re-energize the

Bolt Size Inch, (mm) #10 #14 (6.4 5/16 (7.9 3/8 (9.5	ze mm) (6.4) (7.9) (9.5)	Torque lb, - in. 30 65 128
	inum Bar C	Aluminum Bar Connections  30lt Size Torque nch, (mm) lb, - in.
J		30
	(6.4)	65
σ	(7.9)	128
	(9.5)	240
	(12.7)	600

	SEE NOTE 8	SEE NOTE 11	SEE NOTE II	SEE NOTE
-3.63-		NED TO	PHASE PHASE PHASE	1 5
<b>1</b> 3.63		MOUNTING LOCATIONS IS BARS AND BREAKER 'Z' RAILS SHOW CONNECTORS)	NOTE 6 0 1.25 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	SEE NOTE 4
1	E)		SE SE	<u> </u>

## NOTICE

THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS PRODUCT BY THE MANUFACTURER.



		TITLE
IN VB	225AMP MOUNTING HA	
TYPE		5
PANEL	JINC H	1
TWIN MOUNT	HARDWARE	
MOUNT	RE FOR	

EL TWIN MOUNT	1170	י באפקעאפר רחפ		
21-B144F J3-00	KIT No.	21-B4-FJ3	DRAWING No.	
8	REV	FJ3	LAYER	

_	$\overline{}$	$\overline{}$		$\overline{}$	$\sim$	$\sim$	$\overline{}$		$\overline{}$	_
(3)	(%)	(8)	$^{\prime}$	(6)	(5)	(+)	$(\omega)$	(~)	$(\cdot)$	TEM
_	Ĭ	1	-	4	-	2	2	-	2	ITEM OTY.
	BREAKER OR SWITCH	DEAD FRONT FILLER BLANK	DEAD FRONT FILLER	FILLER MOUNTING BRACKETS	B PHASE BRANCH BUS SUP	A & C PHASE BRANCH BUS SUP	BREAKER MOUNTING BRACKET	B PHASE CONNECTOR	A/C PHASE CONNECTORS	DESCRIPTION
		21F-B144FJ3-01-08	21F-B144FJ3-00-07	21F-B4	21S-AT12-01	21S-AT11-03	21M-B144F J3-01-03	21J-B144FJ3-00-02	21J-B144FJ3-01-01	DWG No.
n	n	(3)	()	(3)	(3	( <u>-</u> )	(3)	(F)		116
V	_	3	2	2	2	4	26	) 15	У 3	TEM OTY.
		AØ, BØ, CØ FISH PAPER	%-20 HEX NUT	14-20 FLAT WASHER	¼-20 x ½* CARRIAGE BOLT	以-20 × 4° PAN HEAD SCREW	¼-20 × 1 SELF TAP BOLT	¼-20 x % SELF TAP BOLT	以-20 × 1¼・SELF TAP BOLT	DESCRIPTION
		211-FP02-02				21H-B144FJ3-00				DVG No.