## INSTALLATION INSTRUCTIONS

## Please Note Before Installation

Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts. Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures.

0

SEE NOTE

SEE NOTE 4


0

[D

## Instructions for installing replacement connecting hardware kits

- \_ Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt to install product into a switchboard or panelboard while energized. Installation of this product should performed by qualified personnel only
- 2) a calibrated voltage detection instrument After electricity has been locked off and tagged out, confirm that no electrical current is present by using
- $\stackrel{\circ}{\cdot}$ Remove dead front cover plates as necessary to gain access to work area
- 4. Tighten screws or bolts to finger tight at this point. De-energized bus bar should now be exposed. Install the B phase (center phase) connector first
- 5.) Install out side phase connector(s), and tighten with fingers
- 6.) Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- 7.) Install circuit breaker or switch mounting brackets if provided
- .8 If available, place the circuit breaker or switch into its intended location to verify proper alignment and fit. If not available, refer to the attached assembly drawings for proper dimensions and locations of components parts. (Circuit breaker or switch is not included in this kit.)
- 9. conductors. Remove any obstructions or foreign materials reduce proper electrical clearances, visible obstructions or foreign materials present that might listed After proper alignment has been verified, tighten all bus before continuing. connections with a calibrated torque wrench to the values in table to the right. Check to be sure there are no or damage insulated
- 10.) If not available, go to step 1. If available, install circuit breaker or switch onto connectors
- 11.) (Some may not be required with twin-mounted breakers) Install circuit breaker or switch filler plates when provided
- 12.) shall re-energize any switchboard or panel board and procedural practices necessary to ensure it is safe to re-apply power to the equipment. Only qualified personnel Re-install dead front cover plates. switchboard or panelboard without first following all safety Do not re-energize the

Torqı Alun	Torque Values for Copper or Aluminum Bar Connections	Copper or onnections
Bolt Size Inch, (mm)	ize (mm)	Torque lb, - in.
#10		30
1/4	(6.4)	65
5/16	(7.9)	128
3/8	(9.5)	240
1/2	(12.7)	600

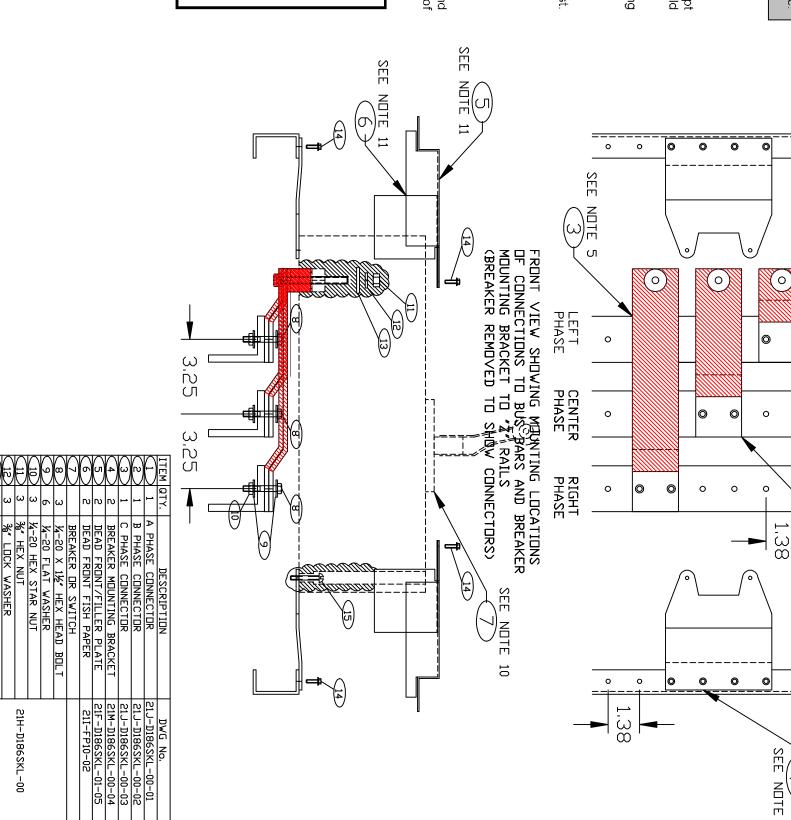

## NOTICE

TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS PRODUCT BY THE MANUFACTURER. THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S



GENERAL ELECTRIC 800AMP MOUNTING HARDWARE FOR SKLA BREAKERS IN AV1 TYPE PANEL TWIN MOUNT 즙 DRAWING No. 21-D186SKL

No.

21-D6

LAYER SKL

RE V

REV-A ₽ 12-20-12 CHANGED DWG No. ITEM വ

$\bigcirc$	0	$\bigcirc$	$\bigcirc$	15)			(12)
				4	12	3	3
				3-20 X 1¼" ROUND HEAD SCREW	1932 X ½" SELF TAP BOLT	%" FLAT WASHER	¾″ LOCK WASHER

BREAKER MOUNTING BRACKET DEAD FRONT/FILLER PLATE DEAD FRONT FISH PAPER

PHASE CONNECTOR

¼-20 X 1½" HEX HEAD 4-20 FLAT WASHER

-20 HEX STAR NUT

HEX NUT

21H-D186SKL-00