INSTALLATION INSTRUCTIONS

Please Note Before Installation

SEE

NOTE

Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts. Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures.

Instructions for installing replacement connecting hardware kits

- <u>.</u> be performed by qualified personnel only Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt install product into a switchboard or panelboard while energized. Installation of this product should
- 2.) After electricity has been locked off and tagged out, confirm that no electrical current is present by using a calibrated voltage detection instrument

0

0

000

0

0

<u>.</u>

0 0 0

0

o

0

0

0

0

0

0

LEFT PHASE

CENTER PHASE

RIGHT PHASE

0 0 0 0

0

0

0

0

0

0

0 0 0 0 0

0

0

0

0

0

0

0

0

0

0

0

o

0

0

0

0

0

0

0

0

0

0

0

SEE NOTE 4

|

0 0 0 0

0

SEE NOTE 7

0

000

0

0

0

0


0

- $\overset{\circ}{\circ}$ Remove dead front cover plates as necessary to gain access to work area
- <u>4</u> Tighten screws or bolts to finger tight at this point De-energized bus bar should now be exposed. Install the B phase (center phase) connector first
- 5.) Install out side phase connector(s), and tighten with fingers
- 6.) Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- 7.) Install circuit breaker or switch mounting brackets if provided
- .8 components parts. (Circuit breaker or switch is not included in this kit.) If available, place the circuit breaker or switch into its intended location to verify proper alignment and fit. If not available, refer to the attached assembly drawings for proper dimensions and locations of

FRONT VIEW SHOWING MOUNTING LOCATIONS OF CONNECTIONS TO BUS BARS AND BREAKER MOUNTING BRACKET TO "Z" RAILS (BREAKER REMOVED TO SHOW CONNECTORS)

- 9.) visible obstructions or foreign materials present that might reduce proper electrical clearances, or damage insulated listed conductors. Remove any obstructions or foreign materials connections with a calibrated torque wrench to the values before continuing After proper alignment has been verified, tighten all bus in table to the right. Check to be sure there are no
- 10.) If not available, go to step 11 If available, install circuit breaker or switch onto connectors
- 11.) (Some may not be required with twin-mounted breakers) Install circuit breaker or switch filler plates when provided
- 12.) shall re-energize any switchboard or panel board. re-apply power to the equipment. Only qualified personnel switchboard or panelboard without first following all safety and procedural practices necessary to ensure it is safe to Re-install dead front cover plates. Do not re-energize the

Torqu Alum	Torque Values for Copper or Aluminum Bar Connections	opper or
Bolt Size Inch, (mm)	ize (mm)	Torque lb, - in.
#10		30
1/4	(6.4)	65
5/16	(7.9)	128
3/8	(9.5)	240
1/2	(127)	600

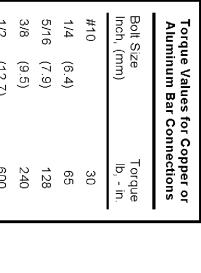

SEE NOTE

__

SEE

NOTE

σ

7



PRODUCT BY THE MANUFACTURER. THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF



SIEMENS / ITE 125AMP MOUNTING HARDWARE FOR ED2, ED4, ED6, HED, HED6, HHED6 IN \$4 TYPE PANEL TWIN MOUNT

DRAWING No. N_o. 21-B128SE6 21-B8 LAYER SE6 P E <

REV-A AA 7-20-05

REV'D

DVG NO

QTY. BREAKER MOUNTING BRACKET
DEAD FRONT/FILLER PLATE
DEAD FRONT/FILLER BLANK
BREAKER OR SWITCH
14-20 X 14" SELF TAP BOLT
14-20 X 36 SELF TAP BOLT %2 X ½" SELF TAP BOLT %2 X 4.000" ROUND HEAD SCREW ¾-20 X ½" CARRIAGE BOLT PHASE CONNECTOR DESCRIPTION WASHER BARRIER 7505

