## INSTALLATION INSTRUCTIONS

SEE

. . .

## Please Note Before Installation

Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures. Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts

## Instructions for installing replacement connecting hardware kits

- <u>.</u> Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt be performed by qualified personnel only. to install product into a switchboard or panelboard while energized. Installation of this product should
- <u>,</u> a calibrated voltage detection instrument. After electricity has been locked off and tagged out, confirm that no electrical current is present by using

0 0

- $\overset{\circ}{\circ}$ Remove dead front cover plates as necessary to gain access to work area
- <u>4</u> () Tighten screws or bolts to finger tight at this point. De-energized bus bar should now be exposed. Install the B phase (center phase) connector first
- 5.) Install out side phase connector(s), and tighten with fingers
- <u>რ</u> Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- .7 Install circuit breaker or switch mounting brackets if provided
- <u>,</u> If available, place the circuit breaker or switch into its intended location to verify proper alignment and components parts. (Circuit breaker or switch is not included in this kit.) If not available, refer to the attached assembly drawings for proper dimensions and locations of
- 9. conductors. Remove any obstructions or foreign materials reduce proper electrical clearances, or damage insulated visible obstructions or foreign materials present that might After proper alignment has been verified, tighten all bus before continuing listed connections with a calibrated torque wrench to the values in table to the right. Check to be sure there are no
- 10.) If not available, go to step 11. If available, install circuit breaker or switch onto connectors
- 11.) (Some may not be required with twin-mounted breakers) Install circuit breaker or switch filler plates when provided
- 12.) shall re-energize any switchboard or panel board. and procedural practices necessary to ensure it is safe to re-apply power to the equipment. Only qualified personnel switchboard or panelboard without first following all safety Re-install dead front cover plates. Do not re-energize the

1/2	3/8	5/16	1/4	#10	Bolt Size Inch, (mm)	Torqı Alum
(12.7)	(9.5)	(7.9)	(6.4)		ize (mm)	Torque Values for Copper or Aluminum Bar Connections
600	240	128	65	30	Torque lb, - in.	Copper or inections

## NOTICE

THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS PRODUCT BY THE MANUFACTURER




IN COP TYPE PANEL TWIN MOUNT	ITLE: FEDERAL PACIFIC SOSSAMB MOUNTING LABBUAGE FOR
KIT No. 21-C142NFJ	DRAWING No. 21-C2-NFJ
O.R.	LAYER NF

Z N


C REV

09-16-03 REV'D DWG NO ITEMS 1 & 4 09-03-03 CHANGED KIT DESIGN. 07-01-03 REV'D DWG NO ITEM 4 AND ADDED FISH PAPE

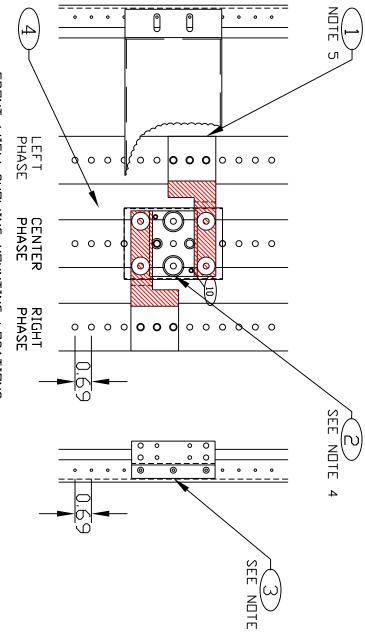

0

MOUNTING BRACKET (BREAKER REMOVED OF CONNECTIONS TO BUS FRONT VIEW SHOWING MO ∽ HOW CONNECTORS> UNTING LOCATIONS BARS AND BREAKER RAILS

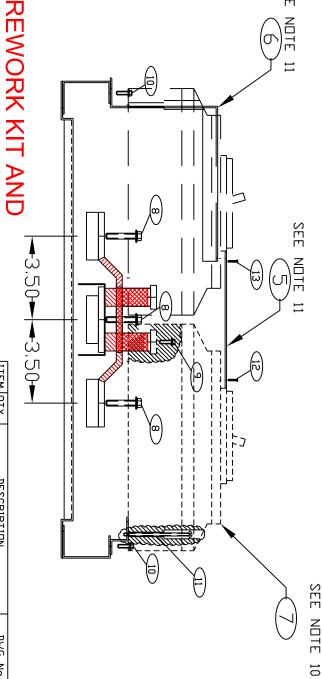

MTG BRKT. & FILLER	RETEST: MTG JUMPERS
	0,

$\bigcup$	0	0	0	$\left(\right)$	(13)	(JS)			9	6	9	6	6	4	(L)	<b>N</b>	$\bigcirc$	ITEM QTY
					1	2	4	8	6	6		1	1	1	2	1	ഉ	QTY.
					%2 X ¼" PAN HEAD SCREW	%≥ X ¼" PAN HEAD SCREW	1%2 × 1½" ROUND HEAD SCREW	%2 X ½° PAN HEAD SCREW	¼-20 x ¾′ SELF TAP B□LTS	¼-20 x 1½" SELF TAP BOLTS	BREAKER OR SWITCH	FILLER MOUNTING BRACKET	DEAD FRONT/FILLER PLATE	FISH PAPER INSULATIO B Ø	BREAKER MOUNTING BRACKET	B PHASE CONNECTOR	A/C PHASE CONNECTORS	DESCRIPTION
							21H-C142NFJ-01					21F-C142NFJ-01-06	21F-C142NFJ-01-05	21I-FP11-01	21M-C142NF J-01-03	21J-C142NFJ-01-02	21J-C142NFJ-02-01	DWG No.